



#### Description of the sensors

The sensors IFK80J (humidity only) / ITFK80J (humidity and temperature) measure the air humidity by means of a humidiy-dependant condenser. The capacitive humidity measuring element, produced using thinfilm technology, consists of a base plate, on which the electrodes are housed and a hygroscopic polymer layer avove it. The hygroscopic polymer layer absorbs water molecules from the medium to be measured (air) or releases them, thereby altering the capacity of the condenser. In a tandem-arranged electronic device, the change in capacity is processed via integrated signal preprocessing into signals-0..20mA or 0..10VDC or 4..20mA.

The measuring element is protected by a protective guard. The sensors are designed for pressureless systems - the measuring medium is non-corrosive air.

The ITFK80J sensors also contain a semi-conductor temperature sensor for simultaneous temperature measurement. Its measured values are likewise converted into standardised signals 0..20mA or 0..10VDC or 4..20mA

The temperature coefficient as well as the self-heating of the electronic may vary according to the location and the application (especially with sensors where electronic and measuring system are integrated in one housing.

# Maintenance - Application instructions -Inf uence of dirt

In a clean environment, the measuring element is maintenance-free. Depending on their type and concentration, aggressive media containing solvents can cause incorrect readings or cause the sensor to fail. Direct sunlight should be avoided. Substances deposited on the sensor element (e. g. resin aerosols, paint aerosols, smoke deposits etc.) are harmful as they eventually form a water-repellent film (this applies to all humidity sensors with hygroscopic measuring elements).

Please consult "application instructions for the sensing elements" (product info sheet no. A 1) or check with the manufacturer for further information which you need to bear in mind when using humidity sensors with capacitive sensing elements.

## Humidity Sensor IFK80J

#### **Humidity-Temperature Sensor ITFK80J**

with capacitive measuring element with current or voltage output,

0...20mA / 0...10VDC or 4...20mA to determine relative air humidity and temperature, duct version

#### **Technical Data**

measuring element accuracy at 23	°C (73,4°F)°C (73,4°F)	
working range measuring medium	atureair, pressu	nearity and repeatability < 0.15%rh per K 595%rh ureless, non-aggressive < 20 s
output <b>humidity</b>	01	10V or 020mA (4wire) or 420mA (2wire)
measuring range <b>te</b>	mperature 0+50°C,-1090°C¹	<sup>1)</sup> ,-3060°C,0100°C <sup>1)</sup>
measuring element accuracy at 0 at (0)		Pt100 class B ±0.2 K ±0.36 °F ±0.3 K ±0.54 °F
working range output <b>temperatur</b> e	e0	30+80°C (-22176°F) 10V or 020mA (4wire) or 420mA (2wire)
BALKO 1kΩ; SILIC	outputs Mx35; Pt100; Pt1000; :ΟΝ 2kΩ;	Ni1000; AD592; LM34;
		: (75°F) 52kΩ; 3kΩ; 5kΩ; 10kΩ;
electromagnetic co	mpatibility EMC	30V DC / 24VAC± 10%
		EN 50 082-2
max. load	R <sub>L</sub> (Ω)  y)  utput only)   t temperature4	$= \frac{\text{supply - 10 VDC}}{0.02 \text{ amps}}$
admitted air speed.		15 m/sec (50 ft/sec)
output 010V, 2x 0 420mA, 2x 2x 420mA probe length probe material for channel mountin mounting position contacting	c010Valuminium,	≥0.5m/s≥1m/s≥1.5m/s200mm (7,87") electrolytically oxidized perforation in the caseas you like terminals in the housing
protective system		1.5mm² (0,023"²) polystyrol-ABS IP64 . approx. 0.3 kg (0.6 lbs)

<sup>1)</sup> please observe working range

Tel.: 03303 / 504066

Fax: 03303 / 504068

#### Overview of capacitive sensors power supply 15...30V DC (24V AC ±10 %)


IFK80J	0100%rh	010V DC			1530V DC / 24 V AC	3/4 wire	58014700
DC-Version	0100%rh	420 mA			1530V DC	2 wire	58014800
DC-version	0100%rh	020 mA			1530V DC	3/4 wire	58013000
	0100%rh	010V DC	-30+60°C	010V DC	1530V DC / 24 V AC	3/4 wire	58574747
ITFK80J	0100%rh	010V DC	0100°C*	010V DC	1530V DC / 24 V AC	3/4 wire	58544747
	0100%rh	010V DC	0+50°C	010V DC	1530V DC / 24 V AC	3/4 wire	58524747
	0100%rh	010V DC	-10+90°C	010V DC	1530V DC / 24 V AC	3/4 wire	58624747
	0100%rh	420mA	050°C	420mA	1530V DC	2wire	58524848
	0100%rh	420mA	-30+60°C	420mA	1530V DC	2wire	58574848
	0100%rh	420mA	-20+80°C	420mA	1530V DC	2wire	58264848
	0100%rh	420mA	-10+90°C	420mA	1530V DC	2wire	58624848
	0100%rh	420mA	0100°C*	420mA	1530V DC	2wire	58544848
	0100%rh	020mA	0+50°C	020mA	1530V DC	3/4 wire	58523030
	0100%rh	020mA	-10+90°C**	020mA	1530V DC	3/4 wire	58623030
	0100%rh	020mA	-30+60°C	020mA	1530V DC	3/4wire	58573030
	0100%rh	020mA	0100°C*	020mA	1530V DC	3/4 wire	58543030
Speciality		020 mA	IPt100	Resistance	1530V DC	3/4 wire	58703050
IEKOO IID4400		010V DC	IPt100	Resistance	1530V DC	3/4 wire	58704650
IFK80JIPt100		420 mA	IPt100	Resistance	1530V DC	2wire	58704850

#### Overview of capacitive sensors power supply 24V AC ±10 %

IFK80J	0100%rh	010V DC			1530V DC / 24 V AC	3/4 wire	58014700
AC-version	0100%rh	020 mA			24 V AC	4 wire	58014200
ITFK80J	0100%rh	010V DC	0+50°C	010V DC	1530V DC / 24 V AC	3/4 wire	58524747
	0100%rh	010V DC	-30+60°C	010V DC	1530V DC / 24 V AC	3/4 wire	58574747
	0100%rh	010V DC	-10+90°C	010V DC	1530V DC / 24 V AC	3/4 wire	58624747
	0100%rh	010V DC	0100°C*	010V DC	1530V DC / 24 V AC	3/4 wire	58544747
	0100%rh	020mA	0+50°C	020mA	24 V AC	4 wire	58524242
	0100%rh	020mA	-30+60°C	020mA	24 V AC	4 wire	58574242
	0100%rh	020mA	-10+90°C	020mA	24 V AC	4 wire	58624242
	0100%rh	020mA	0100°C*	020mA	24 V AC	4 wire	58544242


<sup>\*</sup> observe max. temperature range

#### **Connection diagram**

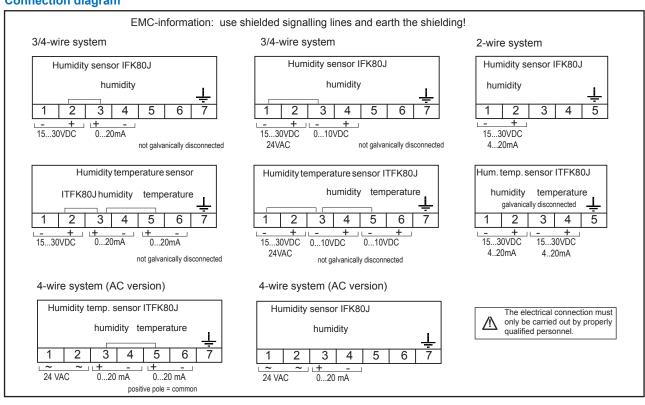


<sup>\*\*</sup> suitable for EDJ controller

### **Dimensions diagram**

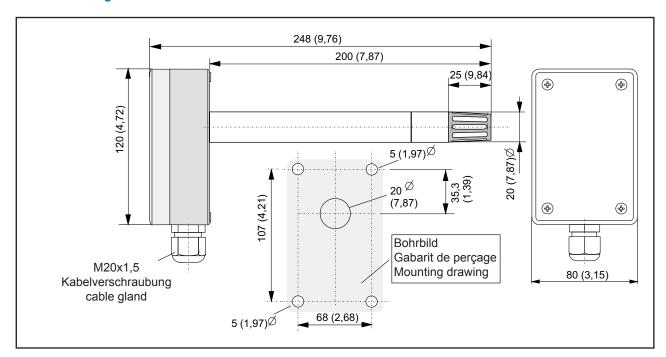

#### Working range

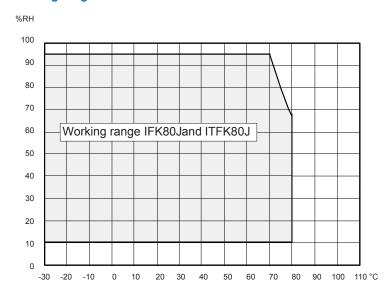

#### **Cleaning instruction**

The surface of the measuring element must not be touched.

To clean the measuring element, its surface can be rinsed, however should only be moistened with water drops; immersing into distilled water is possible


Correct measuring values will be regained as soon as the measuring element has been dried completely. Dry dust can simply be blown off the measuring element. Don't use compressed air for this purpose.

Contact with the inner parts nullifies the guarantee.

#### **Accessories**



Console for wall mounting item no. 20.009

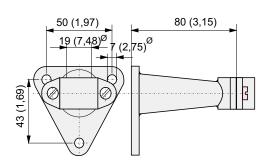

#### **Checking calibration**

It is possible to use sensor checks in order to test the humidity sensors from time to time for accuracy. The physical process is described in detail in DIN 50 008, IEC Publikation 260, ISO/R 483-1966. In the air space above an aqueous saturated saline solutaion an ambient climate is formed whose air humidity is dependant on the water vapour pressure of the saline solution.

The Galltec+Mela sensor checks are designed so that a foil permeable to vapour is positioned between the saline solution and the air space (space in which the measuring element is located). This makes carrying out the sensor checks a very straightforward procedure as follows:

Remove the protective cap of the sensor check while opening the PG screw and introduce the sensor duct up to the mark. Tie the sensor in the PG screw. Please make sure that the sensor check is well tight and air-sealed while caring out your measurement. If you are using a sensor with a "Polyga" measuring element, ensure particularly that the lid of the sensor is well tight and that the cable duct is well sealed.

After a certain period of time, a constant humidity builds up between the saline solution and the air space in which the humidity measuring element is located. Depending on the type of

saline solution and the sensor check, humidity values range from 33%RH to 98%RH. The standard values of the sensor checks

Sensor check °C 5 10 15 20 25 30 %rh 34 34 34 33 33 33 Screw the check firmly onto the humidity sensor. Wait for 2 hours. Ensure that the temperature is kept constant. Take humidity reading according to temperature.

Sensor check °C 5 10 15 20 25 30 %rh 58 57 56 55 53 52 Screw the check firmly onto the humidity sensor. Wait for 2 hours. Ensure that the temperature is kept constant. Take humidity reading according to temperature.

Sensor check	°C	5	10	15	20	25	30
76%rh	%rh	76	76	76	76	76	75
Screw the check firmly onto the humidity sensor. Wait for 2 hours. Ensure that the temperature is							
Screw the check firmly onto the humidity sensor. Wait for 2 hours. Ensure that the temperature is kept constant. Take humidity reading according to temperature.							

are 33%RH, 55%RH, 76%RH and 98%RH. We

recommend a compensation period of about 2 hours. Please ensure that there are no major fluctuations in temperature during this period. Temperature fluctuations severely disturb the equilibrium.

The equilibrium moisture content is dependent on the temperature - according to the type of salt. The corresponding values are given in a correction table located on the sesnsor check.

It is important that you replace the sealing cap of the sensor check after use, otherwise the water of the saline solution will evaporate and the check will become unusable.

#### **Guide to installation**

Interference is often to be encountered during installation. The correct installation procedure can prevent interference to a very large extent. However, some ground rules should be observed.

To avoid interference, suppression should be carried out in accordance with VDE 0875 and VDE 0874

(VDE - this is assumed to be the Vorschriftenwerk Deutscher Elektrotechniker - regulations governing German electrical engineers).

Fundamentally, interference must be removed at its source, where suppressor material is most effective. Interference can, however, also result from electromagnetic fields via signalling lines. The EMV law determines the corresponding protective measures. All Galltec+Mela equipment is designed in accordance with European standards EN 50081-2 and EN 50082-2 (for industrial locations). In addition, further protective measures must be observed.

Unavoidable sources of interference should be kept at a good distance from the control systems.

Data and signalling lines should not be used in parallel with control, networking and power lines.

For data and signalling lines, shielded cable should be used, and the shielding must be applied to the earth terminal. Ensure that earth circuits and fault currents do not arise as a result of a second earth connection.

For equipment with a network connection, it is recommended that a separate network circuit is used.

During the switch process, electrical power consumers such as switch contactors, magnetic valves etc. produce induction voltages that can cause interference. In the trade there is an abundance of protective and suppressor component parts that are most effective when applied directly to the source of the trouble. A suitable suppressor has the added advantage that components such as relays, microswitches etc. have a longer service life.

Further difficulties during installation can arise if signalling lines are joined together with common lines. It is essential to check whether this is permissible. Interference is particularly likely when installing using equipment of different makes. Here, too, the trade offers isolating amplifiers that overcome the problem.